Contents

## CLASS-D DIGITAL MODULE WITH DSP

|                            | SPECIFICATIONS                                  |
|----------------------------|---|
| ITEM                       | D3-2CH  |
| 8Ω Power                   | OUT1:1500W + OUT2:1500W                         |
| 4Ω Power                   | OUT1:1800W + OUT2:1800W                         |
| Frequency Response         | 20Hz-20KHz ±1dB                                 |
| THD+N 1KHz 1W 8Ω           | <0.1%   |
| Signal to Noise Ratio 1KHz | >100dB  |
| Channel Separation 1KHz    | >80dB   |
| Class                      | D   |
| Protection                 | Short, DCP, OVP, UVP, OCP, OTP                  |
| Operating Voltage          | 90V-135V / 180V-265V                            |
| Input Sensitivity          | 0.77V   |
| Input Impedance            | 20ΚΩ  |
| DSP Fuction                | MUTE,Polarity,Gain,Delay,Limiter,Mixer,EQ,XOver |
| DSP Control                | USB and RS-485                                  |
| Dimensions(W×H×D)          | 312×190×120mm                                   |
| Packing Dimension          | 350×210×150mm                                   |
| Net Weight(kg)             | 4.9   |
| Gross Weight(kg)           | 5.9   |

| Contents                      |
|-------------------------------|
| Important note                |
| Input and output              |
| Input and output Installation |
| PC interface                  |
| PC interface                  |
| PC interface                  |
| Specifications                |

| • | •  | • | • | • | • | •  | •  | •  | • | • | • | • | • | • | • | • | • | • | • | • | • | • | 1 |
|---|----|---|---|---|---|----|----|----|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| • | •  | • | • | • | • | •  | •  | •  | • | • | • | • | • | • | • | • | • | • | • | • | • | • | 2 |
| • | •  | • | • | • | • | •  | •  | •  | • | • | • | • | • | • | • | • | • | • | • | • | • | • | 3 |
| d | ir | n | e | n | s | ic | or | ۱. |   |   |   |   |   |   |   |   |   |   |   |   |   |   | 4 |
| • | •  | • | • | • | • | •  | •  | •  | • | • | • | • | • | • | • | • | • | • | • | • | • | • | 5 |
| • | •  | • | • | • | • | •  | •  | •  | • | • | • | • | • | • | • | • | • | • | • | • | • | • | 6 |
| • | •  | • | • | • | • | •  | •  | •  | • | • | • | • | • | • | • | • | • | • | • | • | • | • | 7 |
|   |    |   |   |   |   |    |    |    |   |   |   |   |   |   |   |   |   |   |   |   |   |   | 8 |

#### Important Note

#### **WARNING NOTICES**

#### SAFEGUARDS

Electrical energy can perform many useful functions, This unit has been engineered and manufactured to assure your personal safety. Imporoper use can result in potential electrical shock or fire hazards. In order not to defeat the safeguards, observe the following precautions for its installation, use and servicing.



**Explanation of Graphical Symbols** 



CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION RISK OF ELECTRIC SHOCK: OPEN ONLY IF QUALIFIED AS SERVICE PERSONNEL

#### WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE

#### IMPORTANT NOTE

ATTENTION: This unit must be protected from damp because of the risk of fire and the possibility of electric shocks.

1. Make sure that you have the correct mains voltage. Only operate the unit at the mains voltage marked on the rear panel.

2. Make sure that nothing especially no metal objects are inserted into the device. This could result in electric shock or malfunction.

3. If the unit is subjected to extreme fluctuations of temperature e.g. On being transported from outside into a heated room, condensation can form. This unit should not be used untill it has reached room temperature.

4. In the event of water or any other fluid being accidentally spilt on the unit switch the unit off immediately and send it to a qualified service workshop for inspection.

5. Make sure that the unit is always well ventilated and never exposed to direct sunlight

6. Do not use sprays to clean the unit as they have a detrimental effect on the unit and could ignite suddenly.


7. The machine use single power switch, please cut off the power before fix.

8. Please do not put the cup, vessel of flower or container above the machine, in case the leak out water then cause the leakage current off the machine.

2

### PC interface



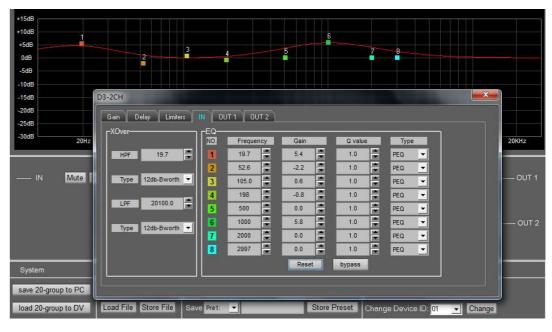




| in    |   | Q value | Тур | в., | ٦ |  |
|-------|---|---------|-----|-----|---|--|
| 0     | ÷ | 1.0     | PEQ | -   |   |  |
| 0     | - | 1.0     | PEQ | -   |   |  |
| 0     | - | 1.0     | PEQ | -   |   |  |
| 0     | ÷ | 1.0     | PEQ | -   |   |  |
| 0     | ÷ | 1.0     | PEQ | -   |   |  |
| 0     | ÷ | 1.0     | PEQ | -   |   |  |
| .0    | ÷ | 1.0     | PEQ | -   |   |  |
| .0    | - | 1.0     | PEQ | -   |   |  |
| Reset |   | bypass  |     |     |   |  |

|             |        |                       |       |        |   |         |   |      |   |   | 2 |
|-------------|--------|-----------------------|-------|--------|---|---------|---|------|---|---|---|
| V           |        |                       |       | -      | - |         |   |      |   | - | _ |
| Limiters I  |        |                       | 2     |        |   |         |   |      |   |   |   |
|             |        | Frequenc              | v     | Gain   |   | Q value |   | Туре |   | ĩ |   |
| 19.7        | 1      |                       | Ē     | 0.0    |   | 1.0     |   | PEQ  | - |   |   |
|             | 2      |                       |       | 0.0    |   | 1.0     |   | PEQ  | - |   |   |
| -Bworth 💌   | 3      | 102                   |       | 0.0    |   | 1.0     |   | PEQ  | - |   |   |
|             | 4      | 198                   |       | 0.0    |   | 1.0     |   | PEQ  | * |   |   |
| 100.0       | 5      | 500                   |       | 0.0    |   | 1.0     |   | PEQ  | - |   |   |
| Bworth 💌    | 6      | 1000                  | ÷ i   | 0.0    |   | 1.0     |   | PEQ  | - |   |   |
| -DWORN -    | 7      | 2000                  |       | 0.0    |   | 1.0     |   | PEQ  | - |   |   |
|             | 8      | 2997                  |       | 0.0    |   | 1.0     | - | PEQ  | - |   |   |
|             |        |                       |       | Rese   | t | bypass  |   |      |   |   |   |
| Gain De     |        |                       |       |        |   |         |   |      |   |   |   |
| Gain De     | elay E | EQ XO                 | ver L | imiter |   | OUT 2   |   |      |   |   |   |
| t<br>Change | Device | 9 ID: <mark>01</mark> | •     | Change |   |         |   |      |   |   |   |
|             |        |                       |       |        |   |         |   |      |   |   |   |

## PC interface

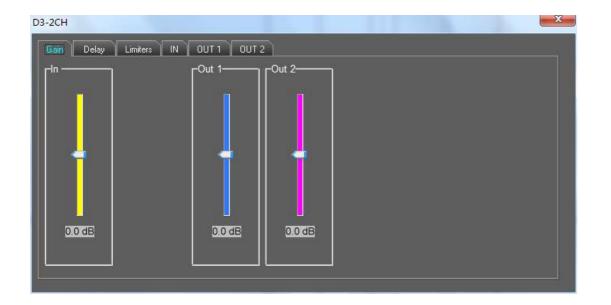


D3-2CH

| D3-2CH    |           |             |   | X |
|-----------|-----------|-------------|---|---|
| Gain Dela |           | OUT 1 OUT 2 |   |   |
|           | -Out 1    | Out 2       | ] |   |
| Threshold | -20.0dB 👤 | -20.0dB     |   |   |
| Attack    | 0.3       | 0.3 💌       |   |   |
| Release   | 2X 💌      | 2X 💌        |   |   |
| Ratio     | 1.2:1 💌   | 1.2:1       |   |   |
|           |           |             |   |   |
|           |           |             |   |   |
|           |           |             |   |   |

6

## Input and output

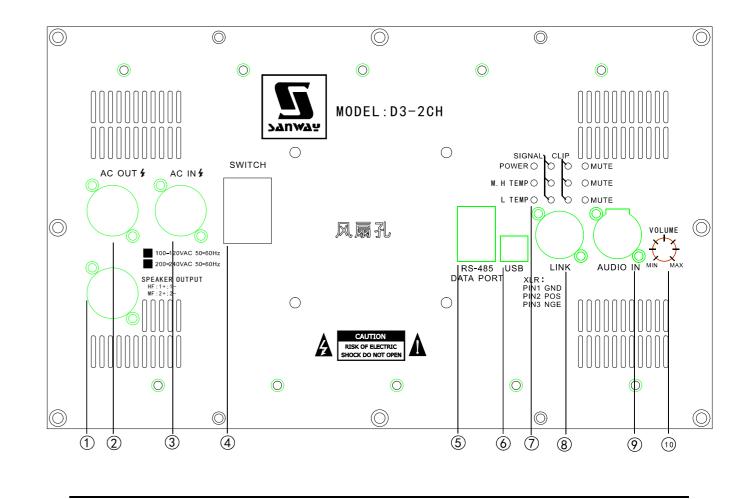


| 1.SPEAKER OUTPUT           |
|----------------------------|
| 2. POWER SUPPLY LINK       |
| 3. POWER SUPPLY INPUT      |
| 4. POWER SWITCH            |
| 5.485 DATA CONTROL INPUT A |
| 6. USB DATA CONTROL INPUT  |
| 7. LED INDICATORS          |
| 8.AUDIO LINK OUTPUT        |
| 9. AUDIO INPUT             |
| 10.VOLUME CONTROL          |


3

#### AND OUTPUT


## Installation dimension


# Output connections

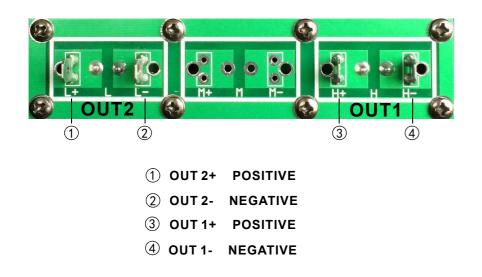

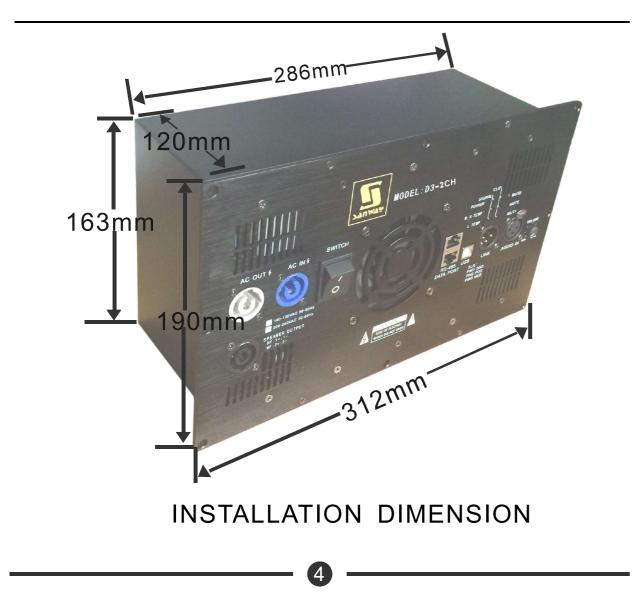

## PC interface

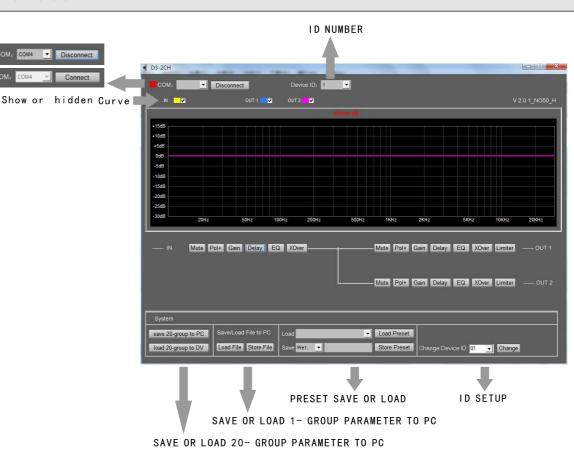

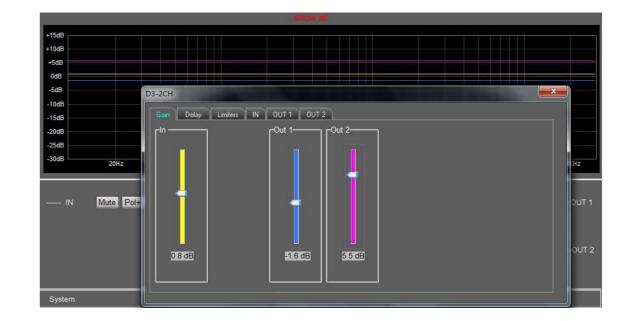

5